

Age 16+

QUICK START GUIDE

ULTIMATE PACK
TD-005-W

Games Included



Thank you for purchasing G'AIM'E. Before use, please read this user manual carefully to ensure safe operation of the product. After reading, kindly keep the manual in a safe place for future reference.

For your safety, the following indications are provided for this product.

CAUTION Failure to observe the precautions indicated on this guide may result in personal injury, including death or serious injury due to fire or electric shock.

ATTENTION Failure to observe the precautions indicated on this guide may result in electric shock or other accidents that may cause injury or damage to surrounding household goods.




Contacts for products
MYGAIME.com
support@mygaime.com


Contents (TD-005-W)

Mini-Console	1 piece	USB Power cable	1 piece
Gun Controller	2 piece	HD Cable (1m)	1 piece
Pedal	1 piece	Quick Start Guide	1 piece
Type-C Power Adapter	1 piece		


GUN LAYOUT

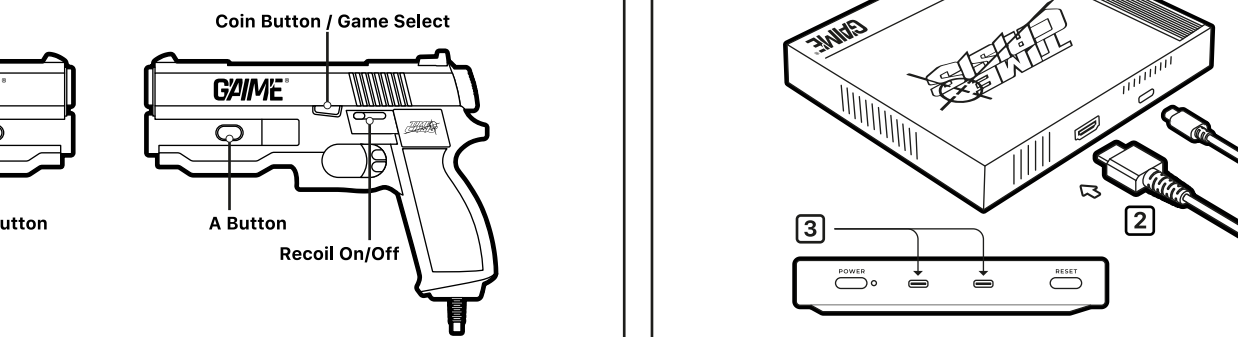

MINI-CONSOLE

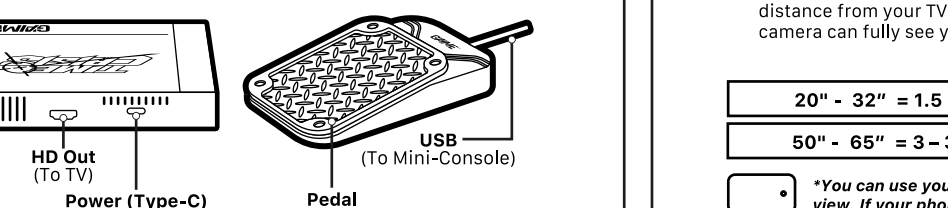

PEDAL

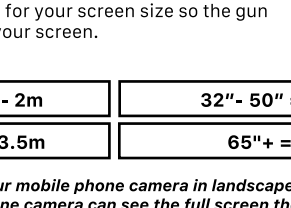


GETTING STARTED

1. Connect the power cable to the G'AIM'E Mini-Console and then to the AC Power Adapter.
2. Connect the HD cable from your TV to the G'AIM'E Mini-Console.
3. Connect your G'AIM'E Gun / Pedal to the G'AIM'E Mini-Console.


Recommended Gaming Area

4. Prepare your gaming area so you are standing the required distance from your TV for your screen size so the gun camera can fully see your screen.

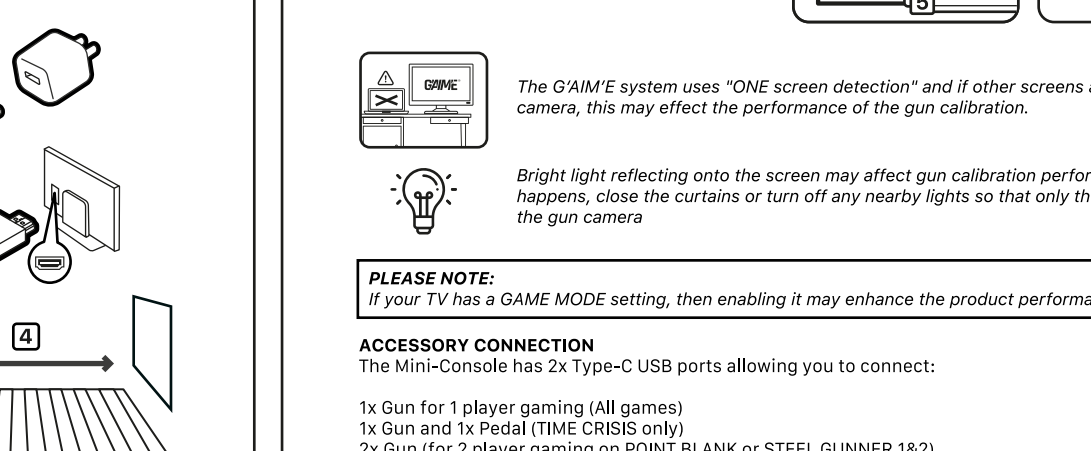

PLAYING

5. Hold the power button for 1 second, a Blue LED will turn on. The loading screen will appear shortly after.
6. Watch the instructional video and then follow the calibration process closely.
7. Ready to G'AIM'E? Shoot the game to play.

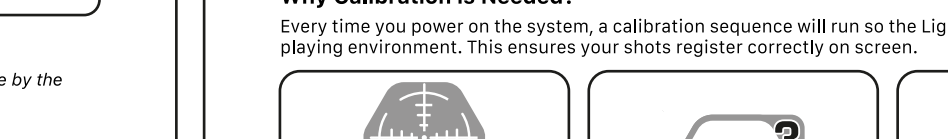

Bright light reflecting onto the screen may affect gun calibration performance. If this happens, close the curtains or turn off any nearby lights so that only the screen is visible to the gun camera.



PLEASE NOTE: If your TV has a GAME MODE setting, then enabling it may enhance the product performance.

ACCESSORY CONNECTION

The Mini-Console has 2x Type-C USB ports allowing you to connect:

- 1x Gun for 1 player gaming (All games)
- 1x Gun and 1x Pedal (TIME CRISIS only)
- 2x Gun (for 2 player gaming on POINT BLANK or STEEL GUNNER 1&2)

PLAYER CONNECTION

The first gun connected will be assigned as PLAYER 1 even if plugged into port 2. The 2nd gun will then become PLAYER 2.

To check which player you are please press the PAUSE button and your player name will be shown. (P1 is Player 1, P2 is Player 2)


IMPORTANT

CALIBRATION INSTRUCTIONS

IMPORTANT: Accurate calibration is essential for the G'AIM'E system to work correctly. Please take your time and follow the steps carefully. Rushing the calibration process and not accurately calibrating the gun will affect your gaming experience.

Why Calibration is Needed?

Every time you power on the system, a calibration sequence will run so the Lightgun can "learn" your playing environment. This ensures your shots register correctly on screen.

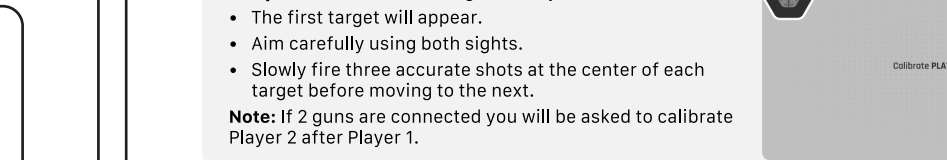

Pause Button: Short press: Used to pause the game. Long press: Used to restart the game (in Pause mode only).

Trigger Button: Used for selecting games, advancing to the next screen, shooting etc.

Coin Button (Credit): Short press: Used for adding credits. Long Press: Used to return to the Game Select Menu (in Pause mode only)

Recoil On/Off: Do not play when you are feeling tired or sleepy.

Unplug and reconnect the controller.

Or, pause the game and hold the A button to restart calibration for that gun.

STEP-BY-STEP CALIBRATION

Step 1 - Instructions

- You will see a message reminding you of the importance of calibration.
- Align the two aiming sights of your gun with the target shown.
- Pull the trigger to continue.

Once calibration is complete, your gun is ready for gameplay!

ABOUT THE DEVICES

Mini-Console

- Hold the power button for one second to turn on the unit and the power indicator will turn on. To turn off the unit, press the power button once and the power indicator will turn off.
- Pressing the reset button while the system is powered will close any game and return the TV box to the game selection screen.
- Pressing and holding the reset button for 5 seconds will reset all highest scores.
- If no buttons on the gun controller are pressed for a period of 1 minutes the gun will go in to SLEEP MODE. To resume or come out of sleep mode, please press the trigger or any button once. This will return you to the last active status.

PLEASE NOTE: When quitting the game, make sure to turn off the power on the console before unplugging the AC adaptor or USB cable to prevent damage to the device or data corruption.

* Save data for the included games is stored on the main unit.

Gun Controller

The basic functions of each button are as follows.

Pause Button: Short press: Used to pause the game. Long press: Used to restart the game (in Pause mode only).

Trigger Button: Used for selecting games, advancing to the next screen, shooting etc.

Coin Button (Credit): Short press: Used for adding credits. Long Press: Used to return to the Game Select Menu (in Pause mode only)

Recoil On/Off: Do not play when you are feeling tired or sleepy.

Unplug and reconnect the controller.

Or, pause the game and hold the A button to restart calibration for that gun.

RECALIBRATION OPTIONS

If at any point you feel calibration is off, you can recalibrate:

- Unplug and reconnect the controller.
- Or, pause the game and hold the A button to restart calibration for that gun.

SETTINGS

The difficulty level for each game can be adjusted in the SETTINGS MENU. The table below shows how the game will be affected by adjusting these settings.

PLEASE NOTE: Settings for each game are different.

Settings Table	Easy	Medium	Hard
TIME CRISIS	Time limit Lives	Long 5	Normal 3
STEEL GUNNER	Difficulty	Easy	Medium
STEEL GUNNER 2	Difficulty	Easy	Medium
POINT BLANK	Lives	5	3

Flash Intensity: Adjusting this level affects how bright and visually striking a screen flash effect appears.

What is Covered: Defects in materials and workmanship that arise under normal use and service. Repair or replacement of the defective product or parts, at our discretion.

What is Not Covered: Damage caused by misuse, accident, or unauthorised modifications. Damage caused by improper installation or maintenance. Damage caused by normal wear and tear. Damage caused by external factors, such as fire, flood, or other acts of nature. Cosmetic damage. Damage to the product that is not covered by the warranty. Any consequential or incidental damages.

Do not use, install or store the product in the following locations:

- Do not place the product in areas exposed to sunlight, near stoves or other places that may become hot.
- Place the device on a flat surface and ensure the ventilation holes are not covered.
- Keep out of reach of young children.
- Do not use the product in dusty, humid or wet environments.
- Keep the cables and terminals dry and free of foreign objects.
- Do not drop or hit the set or any of its parts.
- Do not excessively bend or pull the connection cords.
- Keep the connectors clean and check them for damages regularly.
- Do not disassemble or modify the product or accessories.

Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

Stop playing immediately and seek medical attention if you experience any symptoms.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

WARNING: Immediately stop playing if you experience any unpleasant symptoms, such as: headaches, dizziness, nausea, or fatigue, or if you experience discomfort or pain in any part of your body, such as your eyes, ears, hands, arms, or legs. Do not start playing again after the symptoms improve until you consult your doctor.

ABOUT THE DEVICES

Mini-Console

- Hold the power button for one second to turn on the unit and the power indicator will turn on. To turn off the unit, press the power button once and the power indicator will turn off.
- Pressing the reset button while the system is powered will close any game and return the TV box to the game selection screen.
- Pressing and holding the reset button for 5 seconds will reset all highest scores.
- If no buttons on the gun controller are pressed for a period of 1 minutes the gun will go in to SLEEP MODE. To resume or come out of sleep mode, please press the trigger or any button once. This will return you to the last active status.

PLEASE NOTE: When quitting the game, make sure to turn off the power on the console before unplugging the AC adaptor or USB cable to prevent damage to the device or data corruption.

* Save data for the included games is stored on the main unit.

Gun Controller

The basic functions of each button are as follows.

Pause Button: Short press: Used to pause the game. Long press: Used to restart the game (in Pause mode only).

Trigger Button: Used for selecting games, advancing to the next screen, shooting etc.

Coin Button (Credit): Short press: Used for adding credits. Long Press: Used to return to the Game Select Menu (in Pause mode only)

Recoil On/Off: Do not play when you are feeling tired or sleepy.

Unplug and reconnect the controller.

Or, pause the game and hold the A button to restart calibration for that gun.

RECALIBRATION OPTIONS

If at any point you feel calibration is off, you can recalibrate:

- Unplug and reconnect the controller.
- Or, pause the game and hold the A button to restart calibration for that gun.

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

ABOUT THE DEVICES

Mini-Console

- Hold the power button for one second to turn on the unit and the power indicator will turn on. To turn off the unit, press the power button once and the power indicator will turn off.
- Pressing the reset button while the system is powered will close any game and return the TV box to the game selection screen.
- Pressing and holding the reset button for 5 seconds will reset all highest scores.
- If no buttons on the gun controller are pressed for a period of 1 minutes the gun will go in to SLEEP MODE. To resume or come out of sleep mode, please press the trigger or any button once. This will return you to the last active status.

PLEASE NOTE: When quitting the game, make sure to turn off the power on the console before unplugging the AC adaptor or USB cable to prevent damage to the device or data corruption.

* Save data for the included games is stored on the main unit.

Gun Controller

The basic functions of each button are as follows.

Pause Button: Short press: Used to pause the game. Long press: Used to restart the game (in Pause mode only).

Trigger Button: Used for selecting games, advancing to the next screen, shooting etc.

Coin Button (Credit): Short press: Used for adding credits. Long Press: Used to return to the Game Select Menu (in Pause mode only)

Recoil On/Off: Do not play when you are feeling tired or sleepy.

Unplug and reconnect the controller.

Or, pause the game and hold the A button to restart calibration for that gun.

RECALIBRATION OPTIONS

If at any point you feel calibration is off, you can recalibrate:

- Unplug and reconnect the controller.
- Or, pause the game and hold the A button to restart calibration for that gun.

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

ABOUT THE DEVICES

Mini-Console

- Hold the power button for one second to turn on the unit and the power indicator will turn on. To turn off the unit, press the power button once and the power indicator will turn off.
- Pressing the reset button while the system is powered will close any game and return the TV box to the game selection screen.
- Pressing and holding the reset button for 5 seconds will reset all highest scores.
- If no buttons on the gun controller are pressed for a period of 1 minutes the gun will go in to SLEEP MODE. To resume or come out of sleep mode, please press the trigger or any button once. This will return you to the last active status.

PLEASE NOTE: When quitting the game, make sure to turn off the power on the console before unplugging the AC adaptor or USB cable to prevent damage to the device or data corruption.

* Save data for the included games is stored on the main unit.

Gun Controller

The basic functions of each button are as follows.

Pause Button: Short press: Used to pause the game. Long press: Used to restart the game (in Pause mode only).

Trigger Button: Used for selecting games, advancing to the next screen, shooting etc.

Coin Button (Credit): Short press: Used for adding credits. Long Press: Used to return to the Game Select Menu (in Pause mode only)

Recoil On/Off: Do not play when you are feeling tired or sleepy.

Unplug and reconnect the controller.

Or, pause the game and hold the A button to restart calibration for that gun.

RECALIBRATION OPTIONS

If at any point you feel calibration is off, you can recalibrate:

- Unplug and reconnect the controller.
- Or, pause the game and hold the A button to restart calibration for that gun.

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

ABOUT THE DEVICES

Mini-Console

- Hold the power button for one second to turn on the unit and the power indicator will turn on. To turn off the unit, press the power button once and the power indicator will turn off.
- Pressing the reset button while the system is powered will close any game and return the TV box to the game selection screen.
- Pressing and holding the reset button for 5 seconds will reset all highest scores.
- If no buttons on the gun controller are pressed for a period of 1 minutes the gun will go in to SLEEP MODE. To resume or come out of sleep mode, please press the trigger or any button once. This will return you to the last active status.

PLEASE NOTE: When quitting the game, make sure to turn off the power on the console before unplugging the AC adaptor or USB cable to prevent damage to the device or data corruption.

* Save data for the included games is stored on the main unit.

Gun Controller

The basic functions of each button are as follows.

Pause Button: Short press: Used to pause the game. Long press: Used to restart the game (in Pause mode only).

Trigger Button: Used for selecting games, advancing to the next screen, shooting etc.

Coin Button (Credit): Short press: Used for adding credits. Long Press: Used to return to the Game Select Menu (in Pause mode only)

Recoil On/Off: Do not play when you are feeling tired or sleepy.

Unplug and reconnect the controller.

Or, pause the game and hold the A button to restart calibration for that gun.

RECALIBRATION OPTIONS

If at any point you feel calibration is off, you can recalibrate:

- Unplug and reconnect the controller.
- Or, pause the game and hold the A button to restart calibration for that gun.

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

ABOUT THE DEVICES

Mini-Console

- Hold the power button for one second to turn on the unit and the power indicator will turn on. To turn off the unit, press the power button once and the power indicator will turn off.
- Pressing the reset button while the system is powered will close any game and return the TV box to the game selection screen.
- Pressing and holding the reset button for 5 seconds will reset all highest scores.
- If no buttons on the gun controller are pressed for a period of 1 minutes the gun will go in to SLEEP MODE. To resume or come out of sleep mode, please press the trigger or any button once. This will return you to the last active status.

PLEASE NOTE: When quitting the game, make sure to turn off the power on the console before unplugging the AC adaptor or USB cable to prevent damage to the device or data corruption.

* Save data for the included games is stored on the main unit.

Gun Controller

The basic functions of each button are as follows.

Pause Button: Short press: Used to pause the game. Long press: Used to restart the game (in Pause mode only).

Trigger Button: Used for selecting games, advancing to the next screen, shooting etc.

Coin Button (Credit): Short press: Used for adding credits. Long Press: Used to return to the Game Select Menu (in Pause mode only)

Recoil On/Off: Do not play when you are feeling tired or sleepy.

Unplug and reconnect the controller.

Or, pause the game and hold the A button to restart calibration for that gun.

RECALIBRATION OPTIONS

If at any point you feel calibration is off, you can recalibrate:

- Unplug and reconnect the controller.
- Or, pause the game and hold the A button to restart calibration for that gun.

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!

Once calibration is complete, your gun is ready for gameplay!